

Instruction manual – Reflections range

- Husky HUS-HN5 Drinks Cooler
- Husky HUS-HN6 Slimline Drinks Cooler
- Husky HUS-HN7 Dual-zone Drinks Cooler



To ensure safe operation, please read this instruction manual thoroughly before use.

Please retain for future reference.

Due to possible design changes Husky reserve the right to alter the instruction manual without notice.

Images used are for illustration only. Stock not included.

For customer service, please call 01455 555397. Opening times: Monday – Friday 8.45am to 5.15pm (excl. bank holidays).

HUSKY REFLECTIONS DRINKS COOLERS

Thank you for buying this Husky Drinks Cooler. It has been designed and manufactured for years of trouble-free service.

Operation is very simple, but please take a few minutes to read this booklet. It contains important safety information, and tips to ensure you receive the best possible service from your Husky Drinks Cooler.

This free standing appliance is designed for the storage of drinks and other non-perishable beverages, NOT food. It is intended strictly for domestic use.

CONTENTS

Safety Instructions & Warnings.....	3
Disposal of old appliances and packaging.....	4
Electrical safety.....	4
Minimising energy consumption of your appliance.....	4
Handling your appliance.....	5
Positioning your appliance.....	5
Product specification.....	6
HUS-HN5 Drinks Cooler.....	6
HUS-HN6 Slimline Drinks Cooler.....	7
HUS-HN7 Dual-zone Drinks Cooler.....	8
To operate.....	9
Control panel.....	9
Setting the temperature control: HUS-HN5 & HUS-HN6.....	9
Setting the temperature control: HUS-HN7.....	9
Interior light.....	10
Door reversal.....	10
Maintenance and cleaning.....	10
When your appliance is not in use.....	10
Power failure.....	10
Troubleshooting.....	11-12
Warranty.....	13
Product registration.....	Back cover

SAFETY INSTRUCTIONS & WARNINGS

IMPORTANT: Please read this manual before installing and switching on this Husky appliance. The manufacturer assumes no responsibility for incorrect installation and usage of this appliance. Please keep this manual in a safe place for future reference.



- **Do not use damaged appliances. If you are in any doubt, contact Husky.**
- When positioning the appliance ensure that the power cable is not trapped or damaged, and that the appliance is not rested on the power cord
- Do not use adaptors/extension sockets when connecting the appliance to the electrical power supply
- Do not allow children to play with the appliance, or to sit on it or hang onto the door
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not store explosive substances such as aerosol cans with a flammable propellant or other explosive or flammable material in this appliance
- For safety, always clean up any spillages inside or outside of the appliance
- **WARNING!** Do not immerse the electrical parts of this appliance in water or liquids. Never hold the appliance under running water
- **WARNING!** Do not obstruct or cover the ventilation openings
- **WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process
- **WARNING!** Do not use electrical appliances inside the storage compartments of the appliance
- **WARNING!** Do not damage the refrigeration circuit
- Do not plug in damaged plugs
- Do not pull, twist or damage the power cable
- Do not plug in or unplug the appliance with wet hands to prevent electrical shock
- Bottles containing alcohol must be sealed in airtight bottles or containers to avoid spillages or fermentation
- Do not cover the body or top of the appliance
- All electrical repairs must be carried out by qualified engineers. Inadequate repairs may be dangerous.

WARNING: RISK OF ELECTRICAL SHOCK HAZARD

This drinks cooler must be earthed.

If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. **DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF.** Stop using the unit immediately if electric shock is felt when touching the cabinet



DISPOSAL OF OLD APPLIANCES

BE SURE TO MAKE ANY LOCKS UNUSABLE. IF POSSIBLE, REMOVE THE DOOR(S) AND DISCARD SEPARATELY.

WARNING – CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH THE OLD APPLIANCE. CONTACT YOUR LOCAL AUTHORITY FOR PROPER DISPOSAL PROCEDURES.

Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.

Please note: the cooling system may contain gases and refrigerants which require specialist waste disposal.

Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority if you have any questions.

Please ensure the pipework of your appliance is not damaged prior to disposal.

DISPOSAL OF PACKAGING

All the packaging materials with your Husky appliance may be disposed of without danger to the environment.

The cardboard carton and polythene wrappers are recyclable – check with your local authority for the best recycling options. The expanded polystyrene materials included in the packaging can be placed in general waste.



ELECTRICAL SAFETY

THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED SOCKET.

- Before switching on, make sure that the voltage of your electricity supply is the same as that on the rating plate. This appliance is designed to operate on 220~240V AC; 50Hz. Connection to any other power source may damage the appliance
- This appliance may be fitted with a non-rewireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a suitable replacement is found
- If the plug has to be changed, because it not suitable for your socket or becomes damaged in any way, it should be replaced by a qualified electrician. The plug removed must be disposed of safely as insertion into a 13 Amp socket could cause an electrical hazard
- Always remember to unplug your appliance before cleaning.

HOW TO MINIMISE THE ENERGY CONSUMPTION OF YOUR HUSKY APPLIANCE

- Locate the coolest area of the room, away from sources of heat, and out of the direct sunlight. One characteristic of thermoelectric units is the length of time it requires to recover from having the door opened and shut frequently. It may be necessary to wait longer for the temperature to return to its former level once the door has been opened for too long. This is normal for this type of unit.
- Energy consumption will be lower if the appliance stands in a well ventilated space and in particular if the vent at the back of the appliance is clear of obstruction
- Do not place the appliance in direct sunlight or near a heat source such as ovens, radiators, heaters, etc as this will increase energy consumption
- Keep the door closed as much as possible. Ensure there are no obstructions preventing the doors from closing properly
- Setting the temperature to a colder temperature means higher energy consumption, so set only as cool as you really require

- Do not overfill the appliance - overfilling means the cool air cannot circulate freely inside the cabinet which may slow the process of cooling and make the cabinet less efficient
- Turn the appliance off completely if it is not required for a period of days or longer to avoid wasting energy (see also section 'When your appliance is not in use').

HANDLING YOUR APPLIANCE

- To lift the appliance safely, tilt it backwards by no more than 45 degrees, hold the base and rear corners of the appliance carefully. Never use the door handles for lifting
- This appliance is heavy and could cause injury. Ensure there are adequate people present to move the appliance

If moving the appliance:

- Remove all bottles
- Securely tape down the loose shelves inside the appliance
- Tape the door shut
- Protect the outside of appliance with a blanket, or similar item
- Ensure that the appliance stays in an upright position during transportation.

POSITIONING YOUR APPLIANCE

This appliance is a free standing appliance and should not be built in.

It is recommended that you site the Drinks Cooler in a room where the ambient temperature is maintained between 18°-25°C/41°-77°F.

If the ambient temperature of the unit is outside this range, particularly during extreme hot or cold conditions, performance may be affected. It is entirely normal that the temperature on the display fluctuates from the set temperature. This may also occur due to other factors such as opening the door frequently. For this reason it is not suitable to locate the Drinks Cooler in outdoor buildings including conservatories and garages.

- Temperature Range For Your Drinks Cooler:

HUS-HN5 8-18°C/46-64°F	HUS-HN6 Slimline 8-18°C/46-64°F	HUS-HN7 Dual-Zone Upper zone: 8-18°C/46-64°F Lower zone: 9-18°C/48-64°F
----------------------------------	---	--


NOTE: When you use the appliance for the first time or restart it after having been turned off for a long time, there may be a few degrees difference between the temperature you select and the one indicated on the LED readout. This is normal. Once the drinks cooler has been running for a few hours the display will stabilise, but will often fluctuate from the temperature set.

- Ensure that the appliance is situated:
 - Away from direct sunlight and in a dry and well-ventilated space
 - Away from stoves, ovens, radiators and any other heating appliances
 - With a recommendation of at least 15cm clearance around the appliance
- Do not position the appliance in conservatories or outbuildings with extreme high or low ambient temperatures
- Do not use outdoors or leave in rain
- Do not place anything on your appliance
- The appliance must be used in the vertical position and stand on an even, flat surface for quieter operation
- If your appliance is to be placed on carpet, support it with a wooden board underneath. Be aware that placing the appliance on carpet may mean that heat from the compressor may cause the carpet to fade
- Ensure that the plug is easily accessible.

HUS-HN5 Drinks Cooler

SPECIFICATIONS

- **IMPORTANT NOTE:** THIS APPLIANCE IS TO BE USED EXCLUSIVELY FOR THE STORAGE OF NON-PERISHABLE DRINKS. It uses thermoelectric technology to cool drinks to approximately 15°C below ambient temperature, to a minimum of 8°C. It is not intended to operate like, or compete with, a conventional compressor-driven refrigerator. THIS MODEL IS NOT SUITABLE FOR THE STORAGE OF FOOD OR PERISHABLE DRINKS.
- It is intended strictly for domestic use.

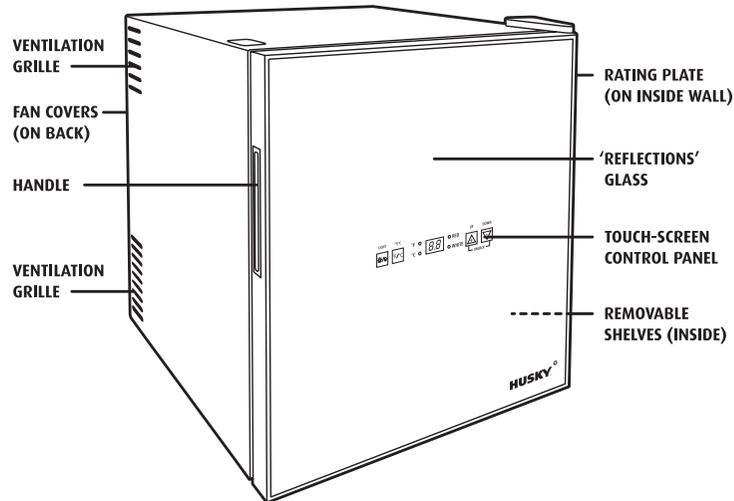


CAPACITY

You may place up to 16 x standard-sized 75cl bottles in the appliance. As bottles differ widely in size the actual number of bottles may vary.

HUS-HN6 Slimline Drinks Cooler

SPECIFICATIONS

- **IMPORTANT NOTE:** THIS APPLIANCE IS TO BE USED EXCLUSIVELY FOR THE STORAGE OF NON-PERISHABLE DRINKS. It uses thermoelectric technology to cool drinks to approximately 15°C below ambient temperature, to a minimum of 8°C. It is not intended to operate like, or compete with, a conventional compressor-driven refrigerator. THIS MODEL IS NOT SUITABLE FOR THE STORAGE OF FOOD OR PERISHABLE DRINKS.
- It is intended strictly for domestic use.

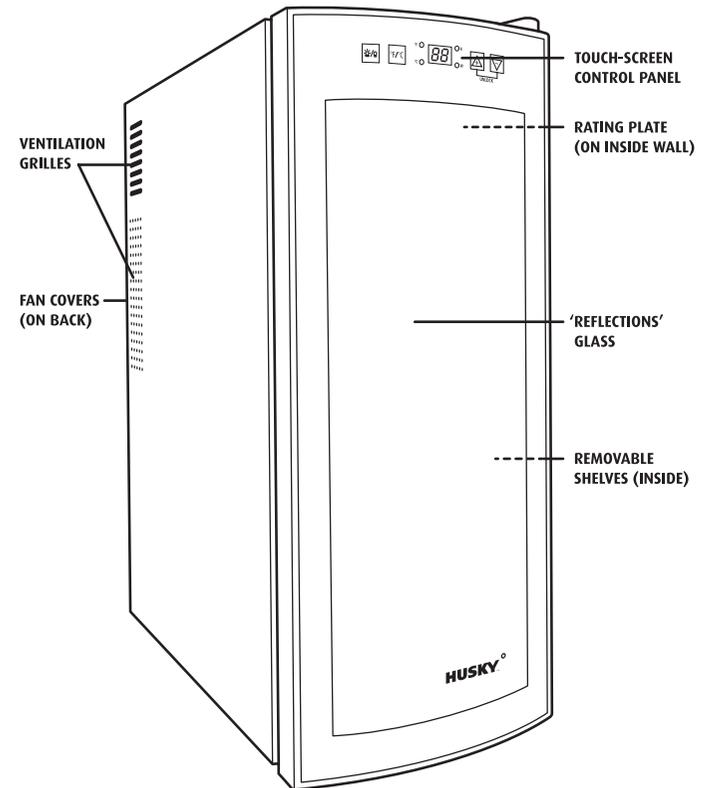


CAPACITY

You may place up to 12 x standard-sized 75cl bottles in the appliance. As bottles differ widely in size the actual number of bottles may vary.

HUS-HN7 Dual-zone Drinks Cooler

SPECIFICATIONS

- **IMPORTANT NOTE:** THIS APPLIANCE IS TO BE USED EXCLUSIVELY FOR THE STORAGE OF NON-PERISHABLE DRINKS. It uses thermoelectric technology to cool drinks to approximately 15°C below ambient temperature, to a minimum of 8°C. It is not intended to operate like, or compete with, a conventional compressor-driven refrigerator. THIS MODEL IS NOT SUITABLE FOR THE STORAGE OF FOOD OR PERISHABLE DRINKS.
- It is intended strictly for domestic use.

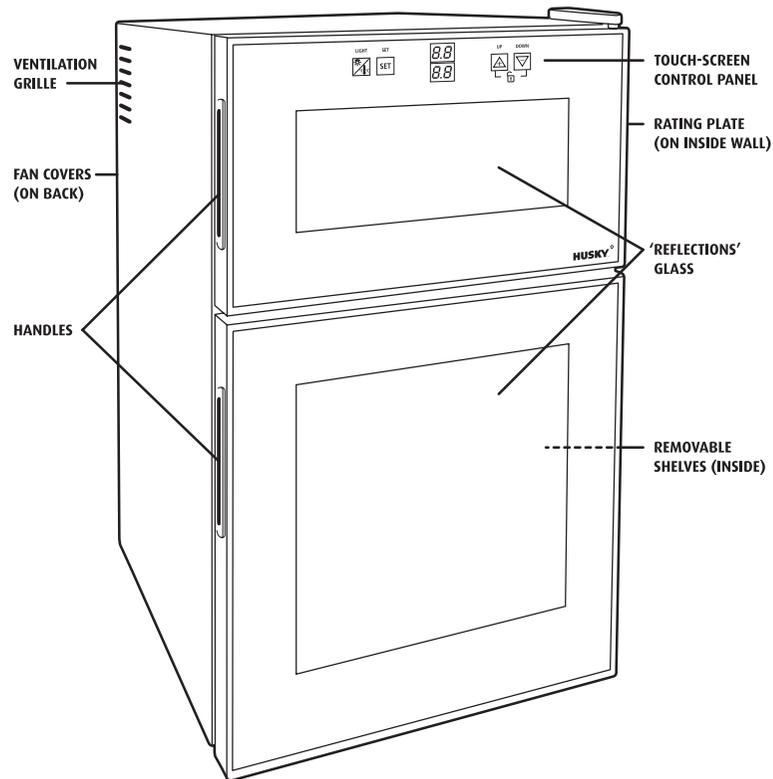

CAPACITY

You may place up to 24 x standard-sized 75cl bottles in the appliance: 8 in the upper compartment and 16 in the lower compartment. As bottles differ widely in size the actual number of bottles may vary.


TO OPERATE

- When the appliance has been positioned, adjust the levelling feet to ensure the unit is stable. This is essential to ensure quiet running and proper door opening/closing
- Ensure that the appliance is not connected to the power and clean the interior compartment following the instructions on page 10.
- Remove all transportation tapes
- Follow the instructions below to set the temperature
- Once connected, the appliance should work for 24 hours continuously until it reaches the required temperature
- During this time, do not open the door frequently or overfill the appliance
- There may be an odour when you first switch on the appliance, it will disappear as it starts to operate
- If the appliance is unplugged or power lost, you must wait at least 15 minutes before restarting. If you attempt to restart the unit before this delay, the appliance may not start.

CONTROL PANEL


Your drinks cooler is fitted with an automatic control panel lock that activates 12 seconds after the last time a button has been touched. To unlock the panel press the UP and DOWN buttons together and at the same time for three seconds. You will hear a 'beep'. The panel is now active for 12 seconds.

Setting the temperature control: HUS-HN5 & HUS-HN6

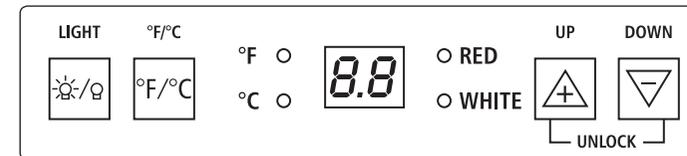

Unlock the control panel first (see above). Once active, you can display the temperature in either Celsius or Fahrenheit by pressing the °F/°C button. The appropriate indicator will illuminate. You may set the temperature as you wish by pressing the UP or DOWN buttons on the control panel. The set temperature will increase by 1°F or 1°C for each depression of the UP button. The temperature will decrease by 1°F or 1°C for each depression of the DOWN button.

Setting the temperature control: HUS-HN7

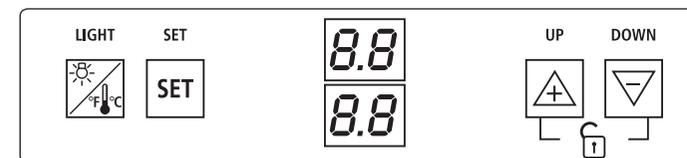

The temperatures for the upper and the lower compartments may be set independently. Note: the factory default setting is 12°C/54°F.

Unlock the control panel first (see above). To adjust the temperature press SET and the upper display will flash. Set the desired temperature by pressing the UP or DOWN buttons on the control panel. The set temperature will increase by 1°F or 1°C for each depression of the UP button. The temperature will decrease by 1°F or 1°C for each depression of the DOWN button.

Press SET again and the lower display will flash. Set the desired temperature by pressing the UP or DOWN buttons as described above.

INTERIOR LIGHT

To turn the interior light ON or OFF, first unlock the control panel (see page 9) then push the button marked with the "Light" symbol. The light will turn off automatically after 10 minutes.

DOOR REVERSAL

The doors cannot be reversed on these Husky appliances.

MAINTENANCE & CLEANING



Disconnect the appliance from the power before cleaning. Always reconnect the plug with dry hands. Never pour water over the appliance.

Interior Cleaning

- Wash the interior with warm water and neutral detergent such as bicarbonate of soda (5ml to 0.5 litres of water)
- Do not use abrasive products, detergents or soaps
- Wipe the wooden shelves with the same solution.
- Dry all surfaces thoroughly.

Exterior Cleaning

- Wash the outer cabinet including the back and bottom of the appliance with warm soapy water.
- Do NOT use abrasive products as this can damage the finish
- Once or twice a year dust the fans within the appliance with a brush or vacuum cleaner to maintain efficient performance
- Dry all surfaces thoroughly.

WHEN YOUR APPLIANCE IS NOT IN USE

If the appliance is not being used for long periods:

- Unplug your appliance
- Clean and dry the inside of the appliance. Leave the door slightly open to allow it to dry completely
- An appliance which is unused without being cleaned may start to smell musty or develop mildew.

POWER FAILURE

If a power cut occurs, do not open the door more often than necessary in order to conserve cold air. Wait at least 15 minutes before restarting. If you attempt to restart the unit before this delay, the appliance may not start.

TROUBLESHOOTING

Before returning your appliance to where you purchased it from, check the following points as you may be able to solve any problem yourself.

Problem	Solution
The appliance does not work	<ul style="list-style-type: none"> • Check that the appliance is turned on • Check power cable is plugged in and that the fuse has not blown • Check that the voltage is correct for the appliance • Try a different socket which is known to work • Check that the control panel is not locked.
The temperature is not cold enough	<ul style="list-style-type: none"> • Check power cable is connected and that the fuse has not blown • The wrong temperature selected. Adjust temperature (see page 9) • The appliance is overfilled • Appliance exposed to direct sunlight or heat source • The door is being opened too often or the door gasket is damaged • Check that the ambient temperature is within the operational limits of the appliance • Check that the temperature is set to a suitable temperature.
Internal temperature too high or low	<ul style="list-style-type: none"> • Check thermostat – is it set too high or low? • The correct clearances are at the sides/back • The door is not being opened too often • The door is not closing completely.
Unusual noises or noisy operation	<ul style="list-style-type: none"> • Check that the appliance is on a flat, level surface and is stable • Check the clearance around the appliance and that it is not touching any other items • Shelves are out of position • Hoover the dust from the fan(s).
Outer surfaces are wet	<ul style="list-style-type: none"> • Water source or leak too near the appliance – dry surfaces thoroughly and move the appliance • Inner surfaces are wet • Caused by condensation – dry the inside of the appliance • Door opened too often or kept open too often.
Inner surfaces are wet	<ul style="list-style-type: none"> • Caused by condensation – dry the inside of the appliance • Door is opened too often or kept open too long.
Inner surfaces are iced up	<ul style="list-style-type: none"> • Door opened too often or left open, or the ambient temperature is too high or too humid.
Not achieving temperature set	<ul style="list-style-type: none"> • The temperature shown on the display is showing the temperature of where the sensor is located. It is perfectly normal operation for the temperature to read a different temperature to the set temperature, as the temperature within the appliance will fluctuate continually. • Temperature performance is affected by several factors, i.e. how often the door is opened, the ambient temperature, how full the appliance is, etc. • If the temperature shown is higher than the set temperature, there is no need to reset as the appliance will be continually working to reach the required set temperature. • Check that there is sufficient ventilation around the unit.

Continued overleaf..

Problem	Solution
The appliance turns on and off frequently	<ul style="list-style-type: none"> • The room temperature is hotter than normal • A large amount of contents has recently been added to the appliance • The door is opened too often • The door is not closed completely • The temperature control is not set correctly • The door gasket does not seal properly.
Control panel/keypad does not work	<ul style="list-style-type: none"> • Check that the control panel is not locked (see page 9).
The light does not work	<ul style="list-style-type: none"> • Unlock the control panel (see page 9) • The light button is 'OFF' • The light will automatically turn off after 10 minutes.
The door will not close properly	<ul style="list-style-type: none"> • The door is misaligned • Check that no contents are obstructing it • The appliance is not on a level surface • The shelves are out of position.
Smell/odour	<ul style="list-style-type: none"> • Check the appliance contents • Check for spillages inside the appliance. Remove shelves and rack to check prior spills have been cleaned up.

WARRANTY

This Husky appliance is guaranteed to be free from defects in parts and manufacture for 12 months from date of purchase, provided that the appliance is used under the normal operating conditions shown within the manual. Your attention is drawn to the following:

- Husky Retail Ltd. will not accept any liability for damage or injury caused by improper use
- Husky Retail Ltd. will not be liable for any damage caused by moving the appliance; improper power supply; defective wiring or fuses; accident, alteration, abuse or misuse of the appliance; abnormal operating conditions; commercial or industrial use; fire; water damage; or customer misuse
- This warranty is void if service on the appliance is performed by any person other than an approved technician, or if the appliance is used for commercial purposes.

This warranty is available only to the original purchaser and is not transferable. Your normal consumer rights are not affected.

If service is required, **DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF**. Please return the appliance to where you purchased it from. Proof of purchase will be required for any warranty claims. You must retain your original receipt. If service under warranty is required, you will be required to produce this. Please also retain the original packaging should the appliance need to be returned.

Please note: As part of our policy of continuous product improvement, Husky Retail Ltd. reserves the right to amend specifications without notice.

HELPLINE/TECHNICAL SUPPORT

For customer service and spare parts, please call **01455 555397**
Opening times: **Monday-Friday 8.45am-5.15pm (excluding bank holidays)**
Or visit **FAQs** at husky-lifestyle.co.uk



The crossed out whee bin symbol is displayed on this manual as this appliance should not be disposed of with your general household waste. It should only be discarded in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure of the success of these schemes and for the protection of the environment.

For your nearest disposal facility or for more details, visit <https://www.recycle-more.co.uk/>

HUSKY[®]

Husky Retail Ltd.
37 Station Road, Lutterworth LE17 4AP.
Tel: +44 (0)1455 555397
husky-lifestyle.co.uk



FOLD HERE

Affix
stamp
here

Product Registration
Husky Retail Ltd.
37 Station Road
LUTTERWORTH
LE17 4AP

PRODUCT REGISTRATION

Please either **register your product online at www.husky-lifestyle.co.uk** OR complete this form, selecting answers as necessary. When completed, remove this page from the manual, fold and seal it with tape or staples, then post to the address shown overleaf. Husky Retail Ltd values your privacy. Your details will not be forwarded on to other parties.

Title: **First Name:** **Surname:**

Email Address:

Home Phone Number:

Mobile Phone Number:

Your Address:

.....

..... **Postcode:**

Product type: Reflections Drinks Cooler

Model No: HUS-HN5 HUS-HN6 HUS-HN7 (tick as appropriate)

(You will find the Model Number on the rating plate which you will find either inside or on the back of the appliance)

Serial No:

(This is typically located on the back of the exterior of the appliance)

Date of Purchase:

Husky collects the above information to maintain warranty records only.

Please tick if you'd like to receive information on new products and promotions from Husky via email

Are there any features you would like to see on your Husky product?:

.....

.....

HUSKY[®]

Husky Retail Ltd.
37 Station Road, Lutterworth LE17 4AP.
Tel: +44 (0)1455 555397
husky-lifestyle.co.uk